


THE SURVIVAL BAG™

Assembly



LOOSEN NUT

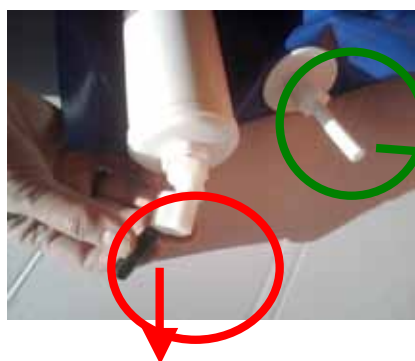

**X DISCARD
BLACK PLUG**



**INSERT WHITE TUBE INTO
CARTRIDGE & TIGHTEN NUT**



You are now ready to hang up your **SURVIVAL BAG** and fill with water for treatment.
Note: The tap at the base of the filter is to control the flow of water. Allow up to 5 minutes for the cartridge to condition. The initial flow will be slow until the media is saturated.

For extremely dirty water the inner cloth filter bag can be pulled out by the loop and rinsed clean.